

# Convertible "7000 Series" Crib Instruction Sheet

Read All Instructions Before Assembling Crib.

Keep Instructions For Future Use.

**(A PHILLIPS HEAD SCREWDRIVER AND A FLAT-HEAD SCREWDRIVER IS REQUIRED)**

### PARTS LIST

- (1) Back Frame Assembly
- (1) Front Frame Assembly
- (2) End Frames
- (2) Youth Posts Caps
- (1) Youth Rail
- (1) Mattress Support (Spring)

### HARDWARE

- (2) 80mm Bolts
- (12) 60mm Bolts
- (14) Washers
- (8) Tension Pins
- (1) Allen Wrench

### ITEMS INCLUDED WITH THE

#### YOUTH BED CONVERSION KIT (sold separately)


- (1) Guard Rail
- (2) Tension Pins

### ITEMS INCLUDED WITH THE

#### ADULT RAIL CONVERSION KIT (sold separately)

- (2) Adult Rails
- (8) Cam Stud
- (8) Cam Locks
- (1) Support Bracket Kit

Model \_\_\_\_\_ MFG. Date \_\_\_\_\_ P.O. # \_\_\_\_\_

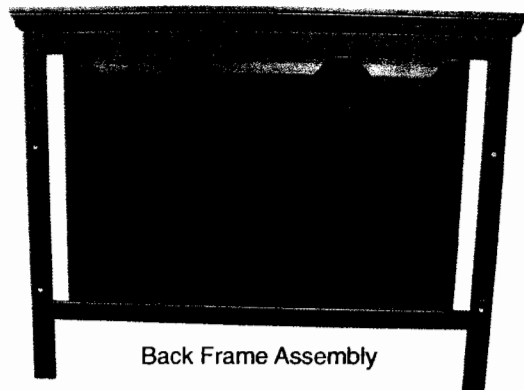


Back Frame Assembly



Guard Rail



Youth Rail

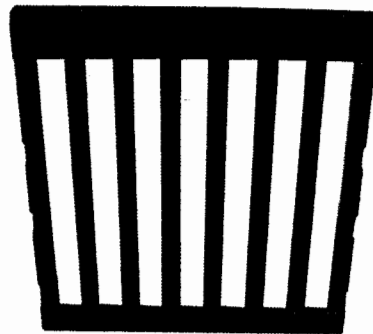


End Frames




Tension Pin




Washer

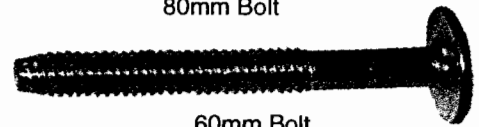

80mm Bolt




60mm Bolt

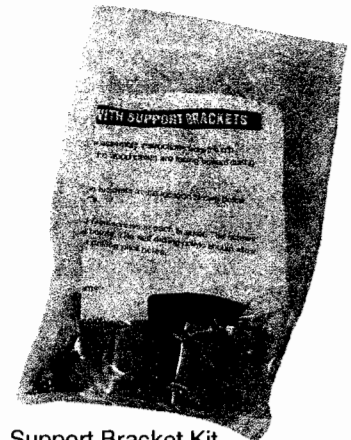


Support Bracket Kit



Mattress Support (Spring)

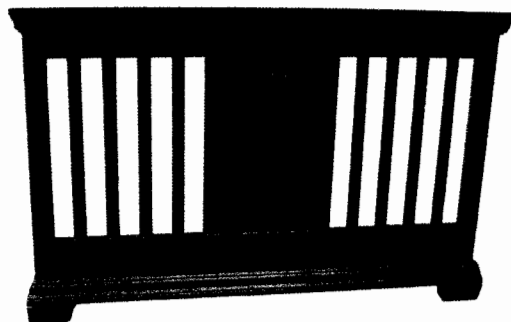

Front Frame Assembly

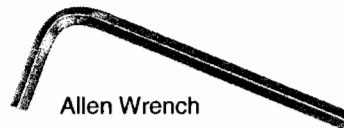


Allen Wrench



Youth Post Caps



Cam Lock



Cam Stud




Adult Rail

DO NOT substitute parts. Contact 1-800-TEL-CRIB for replacement parts and instructional literature if needed.


# CRIB ASSEMBLY INSTRUCTIONS

**Step 1:** To attach the two End Frames to the Front and Back Assemblies, You will notice notched area of the top end rail of the End Frame must be attached to the front of the crib (See photo). Bolt the End Frames to the Front and the Back Assemblies using eight 60mm Bolts, eight washers and the Allen Wrench. Tighten all the bolts at this time.

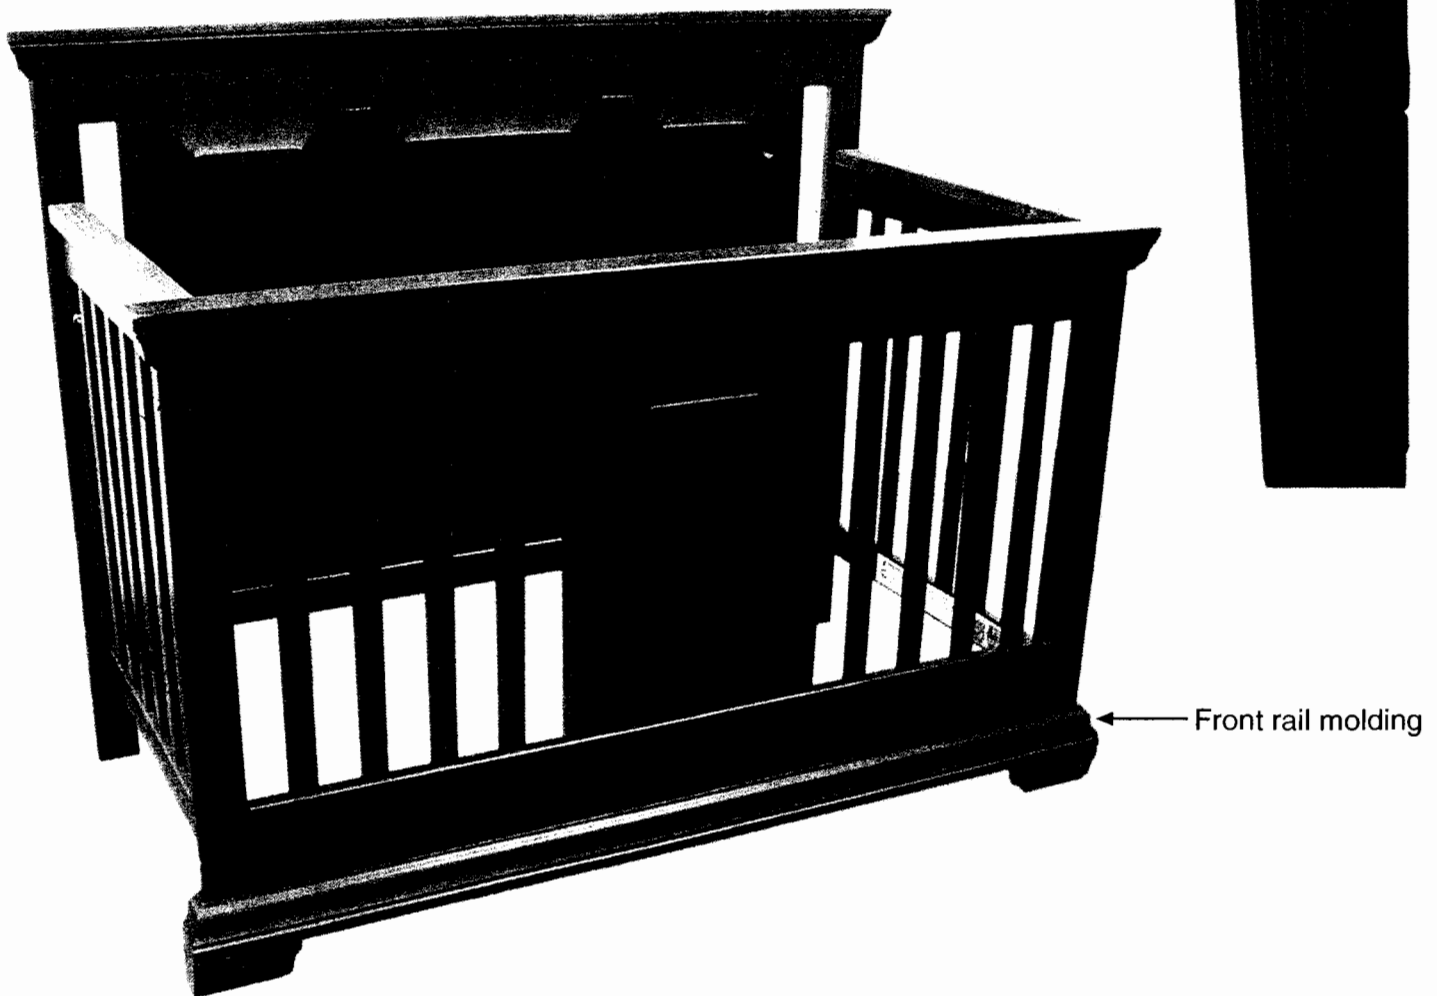

**Step 2:** Attach the Mattress Support (Spring) to the Crib at the position you desire to mount. You must swing the arms out and slide them into the cut out areas between the End Frames and the post. Next, insert the 60mm Bolts with washer into the holes of the End Assembly, through the support arms and into the inserts in the posts. (Make sure that the bolts go through the holes in the support arms.) Tighten all the bolts.

\*Note in photo how arms are positioned and the arms of the spring support are pointing up.

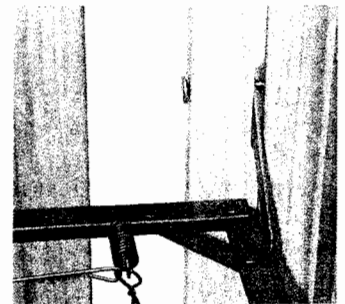


Once a crib has been converted to a toddler/youth bed or adult bed it is not intended to be converted back to a crib.

# YOUTH BED CONVERSION INSTRUCTIONS

Make sure the Mattress Support (Spring) is in the lowest position for the Youth Bed Conversion stage.

WITH YOUTH RAIL (included with the Crib purchase)

**Step 1:** Remove the Front Frame from the crib by removing the four 80mm bolts in the two Front Posts and the three 80mm bolts located in the bottom of the Front Rail Molding. Now you will be able to lift the Front Frame Assembly center portion out of the Front Frame Assembly.

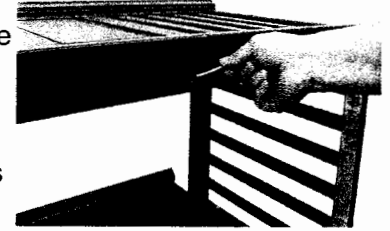

**Step 2:** Tap the two Tension Pins half way into the small holes located on the ends of the Youth Rail.

**Step 3:** On the bottom side of the Front Frame where the feet are attached to the bottom cap rail you will notice that there is a bolt head. You will need to loosen these bolts up slightly to make slack in the frame so the youth rail can be slid into place.

**Step 4:** Once the Youth Rail is in place, then you will take two 80mm bolts and insert them in the bottom holes in the front posts and tighten with the Allen Wrench. You will then place the three 80mm bolts back into the bottom side of the Bottom Front Cap Rail Molding. Re-Tighten the bolt heads that are located in the bottom side of the front posts feet securely.



**Step 5:** To attach the two Youth Post Cap to the top of the Front Post, using two 80mm Bolts and one Tension Pin in each. Insert the tension pin in the smaller holes and line up the placement of the bolts and tighten with the Allen Wrench.

**With Optional Youth Bed Conversion Kit**

Follow steps 1-5 using optional Guard Rail instead of Youth Rail.

# ADULT BED CONVERSION INSTRUCTIONS

Using Wood Rails (sold separately)


**Step 1:** Remove the Mattress Support (Spring)

**Step 2:** Remove the End Frames

**Step 3:** You now have the Back Frame Assembly as your headboard and the Front Frame Assembly as your Footboard. You can now attach wood rails to the headboard and footboard.

**Step 4: For Wood Rails:**

The wood rails will be attached with eight Cam Locks and eight cam studs and one Allen Wrench. Screw two of the cam studs into the bottom inserts of each post. Insert the cam lock in the holes on the inside of the rail with the slotted side facing up. (Note that the cam locks have an arrow on the face side of them. Have this pointing toward the hole where the cam stud is slide up on to.) Slide the rails up on the cam studs until the rail is all the way against the post. Using your Allen Wrench, tighten the Cam Locks. Repeat at all four corners of the bed. **Make sure the cleat on the inside of the Adult Rail is at the top.**

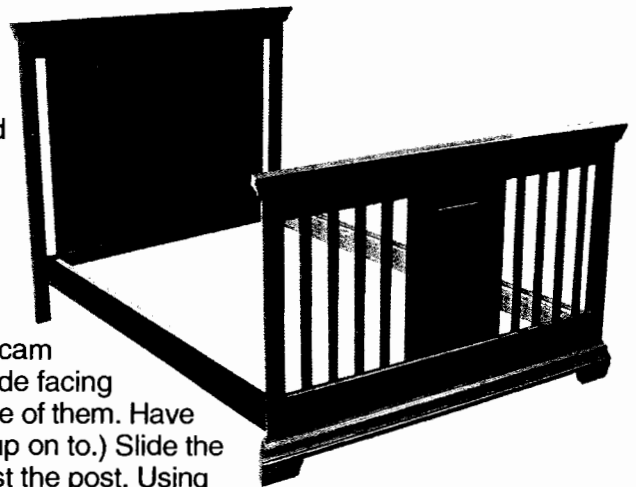

**The adult bed is not intended to be used by children under 6 years of age without proper adult supervision. This adult bed is NOT a toy. DO NOT allow children to play or climb on adult bed.**

## FOR FUTURE USE AND REFERENCE

RETAIN THIS INSTRUCTION SHEET AND THE CRIB TOOLS IN THE ORIGINAL SACK AND SECURE IT TO THE SPRING UNDER THE MATTRESS WITH PLASTIC TIES.

**CARE INSTRUCTIONS:** The natural warmth of wood is a lasting value. Character marks, checking and grain variations are part of the beauty of wood and, therefore, should not be a concern. To preserve your furniture, we suggest the following:

- Do not expose furniture to direct sunlight or extreme changes in temperature or moisture.
- Do not place the furniture near heating or air conditioning vents.
- Wipe up spills promptly.
- When cleaning your furniture, use non-toxic, non-abrasive furniture cleaner with soft, lint-free cloth. Dry thoroughly and then apply furniture polish. Always wipe the furniture in the direction of the wood grain.
- If refinishing, use non-toxic finish specified for children's products.

We recommend the furniture to be polished every six months. Over polishing can distort the natural finish of the product.

### **WARNING!**

✓ Failure to follow these warnings and the assembly instructions could result in serious injury or death.

✓ Infants can suffocate on soft bedding. Never add a pillow or comforter. Never place

additional padding under an infant.

✓ To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.

### **WARNING!**

✓ Strings can cause strangulation! Do not place items with a string around a child's neck, such as hood strings or pacifier-cords. Do not suspend strings over a crib or attach strings to toys.

✓ To help prevent strangulation tighten all fasteners. A child can trap parts of the body or clothing on loose fasteners.

✓ DO NOT place crib near window where cords from blinds or drapes may strangle a child.

✓ When child is able to pull to a standing position, set mattress to lowest position and remove bumper pads, large toys and other objects that could serve as steps for climbing out.

✓ Stop using crib when child begins to climb out or reaches the height of 35 in. (89 cm).

✓ After raising side, make sure latches are secure (omit for stationary side cribs).

✓ DO NOT leave child in crib with side lowered. Be sure side is in raised and locked position whenever child is in crib (omit for stationary side cribs).

✓ Check this product for damaged hardware, loose joints, loose bolts or other fasteners, missing parts, or sharp edges before and after assembly and frequently during use. Securely tighten loose bolts and other fasteners. DO NOT use crib if any parts are missing, damaged or broken. Contact Baby's Dream Furniture Inc., for replacement parts and instructional literature if needed. DO NOT substitute parts.


✓ Read all instructions before assembling crib. Keep instructions for future use.

✓ Never use plastic shipping bags or other plastic film as mattress covers because they can cause suffocation.

✓ Infants can suffocate in gaps between crib sides and a mattress that is too small.

✓ If refinishing, use a non-toxic finish specified for children's products.

✓ Follow warnings on all products in a crib.

 **CAUTION ANY MATTRESS USED IN THIS CRIB MUST BE AT LEAST 27 1/4" X 51 5/8" WITH A THICKNESS NOT EXCEEDING 6". INFANTS CAN SUFFACATE IN GAPS BETWEEN CRIB SIDES AND MATTRESSES THAT ARE TOO SMALL.**

This product may be covered by one or more of the following patents:  
D366,778; D366,970,5,077,846  
and other patents pending.



This crib conforms to the applicable regulations promulgated by the Consumer Product Safety Commission, as well as safety certifications by JPMA.



**BABY'S DREAM™**  
FURNITURE, INC.

Buena Vista, GA 31803-0579

[www.babysdream.com](http://www.babysdream.com)

