

**FOR FUTURE USE AND REFERENCE**  
**RETAIN THIS INSTRUCTION SHEET AND THE CRIB TOOLS IN THE ORIGINAL SACK**  
**AND SECURE IT TO THE SPRING UNDER THE MATTRESS WITH PLASTIC TIES.**

**CARE INSTRUCTIONS:** The natural warmth of wood is a lasting value. Character marks, checking and grain variations are part of the beauty of wood and, therefore, should not be a concern. To preserve your furniture, we suggest the following:

- Do not expose furniture to direct sunlight or extreme changes in temperature or moisture.
- Do not place the furniture near heating or air conditioning vents.
- Lift objects rather than dragging them across the top surface when moving them.
- Avoid contact with rubber feet materials (such as computer, desk lamp, radio) on your furniture. Certain plastics may damage the finish.
- Use a protective pad when using your furniture as a writing surface.
- Wipe up spills promptly.
- When cleaning your furniture, use non-toxic, non-abrasive furniture cleaner with soft, lint-free cloth. Dry thoroughly and then apply furniture polish. Always wipe the furniture in the direction of the wood grain.

We recommend the furniture to be polished every six months. Over polishing can distort the natural finish of the product.

**WARNING!** Infants can suffocate on SOFT BEDDING! Never add a pillow, comforters or padding!  
 ✓ To reduce the risk of sids, pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.  
 ✓ To help prevent strangulation tighten all fasteners. A child can trap parts of the body or clothing on loose fasteners.

**WARNING!** To insure your child's safety and for your own peace of mind, be sure to follow instructions properly. Failure to follow these warnings and assembly instructions could result in serious injury or death. Before each usage or assembly, inspect the crib for damaged hardware, loose joints, missing parts or sharp edges.  
 ✓ DO NOT use the crib if any parts are missing or broken.  
 ✓ DO NOT substitute parts. Visit Parts Request at [www.babysdream.com](http://www.babysdream.com) for replacement parts and instructional literature if needed.  
 ✓ Make sure that all bolts and screws are properly tightened. DO NOT over- or under-tighten.  
 ✓ AVOID STRANGULATION: As soon as an infant can sit or stand up, close the crib gate or raise the Drop Side permanently.  
 ✓ DO NOT place the crib near a window where cords from blinds or drapes may strangle a child.  
 ✓ DO NOT tie pacifiers, necklaces or any other items around a child's neck or on the crib parts.

**WARNING!** Strings can cause strangulation! Do not place items with string around a child's neck, such as hood strings or pacifier cords. Do not suspend strings over a crib or attach string toys.  
 ✓ NEVER use plastic shopping bags or other film as mattress covers, because they can cause suffocation.  
 ✓ DO NOT leave a child in a crib with an open gate or lowered Drop Side. Be sure the gate is closed or the Drop Side is raised and locked in position whenever the child is in the crib. After closing the gate or raising the Drop Side, make sure the latches are secure.  
 ✓ The child must be seated at the rear of the crib when lowering or raising the gate or Drop Side.  
 ✓ For a newborn, adjust the spring on the highest level of the Height Adjuster and open the gate or lower the Drop Side for easy access.  
 ✓ As your child grows, adjust the height of the spring down so that he/she cannot pull himself/herself out of the crib. When the child is able to pull to a standing position, set the mattress to the lowest position and remove bumper pads, large toys and other objects that could serve as steps for climbing out. When the child is able to climb out or reaches the height of 35" (90cm), the bed should no longer be used in the form of a crib.  
 ✓ The time that you convert will depend on each child's individual comfort level, maturity, and size. In most instances, with proper adult supervision: Crib 0-2 years of age or when child is 35" or more in height, Youth Bed 2-5 years of age, Adult Bed 6 years and older.

**ANY MATTRESS USED IN THIS CRIB MUST BE AT LEAST 27 1/4" X 51 5/8" WITH A THICKNESS NOT EXCEEDING 6". DO NOT USE A WATER MATTRESS WITH THIS CRIB.**

This product may be covered by one or more of the following patents:  
**D366,778; D366,970,5,077,846**  
 and other patents pending.



This crib conforms to the applicable regulations promulgated by the Consumer Product Safety Commission, as well as safety certifications by JPMA.

**BABY'S DREAM™**  
**FURNITURE, INC.**

Buena Vista, GA 31803-0579  
[www.babysdream.com](http://www.babysdream.com)



**Convertible "Serenity" Crib Instruction Sheet**  
 Read All Instructions Before Assembling Crib. Keep Instructions For Future Use.

**(A PHILLIPS HEAD SCREWDRIVER AND A FLAT-HEAD SCREWDRIVER IS REQUIRED)**

**PARTS LIST**

- (1) Front Frame
- (1) Back Frame
- (2) End Frames
- (3) Large Wooden Dowels
- (1) Mattress Support (Spring)
- (2) Front Posts
- (2) Back Posts

**HARDWARE**

- (20) 60mm Bolts
- (2) Threaded Studs
- (10) Tension Pins
- (1) Allen Wrench

**THESE ITEMS INCLUDED IN ADULT RAIL CONVERSION KIT (sold separately)**

- (8) Cam Locks
- (8) Cam Studs
- (2) Adult Rails




Back Frame



Front Frame




Back Posts

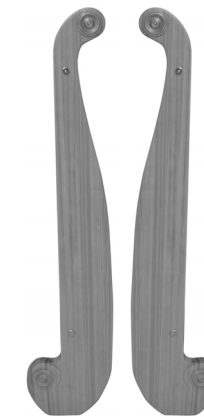


Front Posts



Side Frame

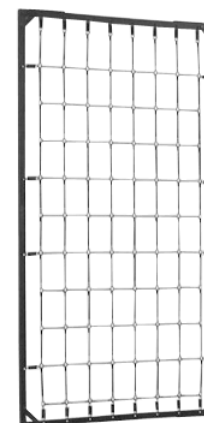

Mattress Support (Spring)

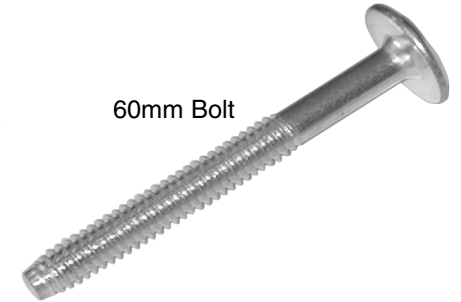


60mm Bolt



Threaded Stud



Tension Pin

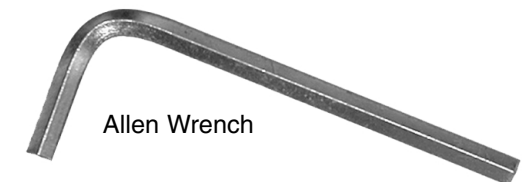

Allen Wrench



Cam Stud



Cam Lock



Large Wooden Dowel



Adult Rail

**DO NOT substitute parts. Contact 1-800-TEL-CRIB for replacement parts and instructional literature if needed.**

# CRIB ASSEMBLY INSTRUCTIONS

To begin assembly you will need to lay all four posts on a carpeted area of a carpeted floor. The decorative rosettes at the top and bottom of each post should be laying against the carpet. You will see two short posts and two long posts. The short posts are front posts and the long posts are back posts.

**Step 1:** You need one end frame, one right back post and one right front post. To attach the posts to the end frame you will need four 60mm bolts and the allen wrench. The bolts must be inserted into the holes on the inside of the end frame. Use the top hole and the hole second from the bottom. Tighten bolts.



Step 1

**Step 2:** Repeat Step 1 for the other end assembly.


**Step 3:** The back and front frame have rounded rails on the top side. This side must be assembled on the top side. To attach the end assembly to the back frame and front frame you will need four 60mm bolts and your allen wrench. The back frame must be lifted to line it up with the end frame assembly and into the inserts located in the ends of the back frame. Tighten using the allen wrench. Attach the front frame to the front post in the same manner as the back frame. The rounded rail must be at the top side during assembly.



Step 4


**Step 4:** After the front and back frames are attached to the side frame, you now need to attach the other end assembly to the front and back frames. Do not tighten these bolts at this time. (The bolts must be loose for the dowels to fit in between the posts).

**Step 5:** You must now attach the dowels to the posts. First you must find the one dowel that has a metal insert and one small hole in each end. This dowel is the bottom front dowel. You must insert a tension pin into the small holes and screw in a threaded stud into the inserts in each end of the dowel. The tension pin must be tapped in with a hammer (half way only) and the fully threaded stud must be screwed half way into the insert in each end of the dowel. This dowel must be attached to the bottom front of the crib. Loosen the bolts at the bottom of the front post and slide the pins into the holes at the bottom of the posts. Slide the posts together to hold this dowel in place until the bolts are tightened.

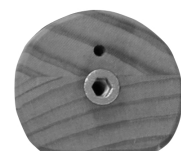

Bottom Front Dowel (end view)


**Step 6:** Loosen the bolts at the top of the front posts. Next you will need one of the other dowels and four tension pins. Insert the tension pins in the holes in the ends of the dowel. Tap these pins halfway into holes in the ends of the dowel. Slide the dowel pins into the holes in the top of the front posts and slide together. Tighten all bolts on the front frame at this time. (This dowel is optional and removable).

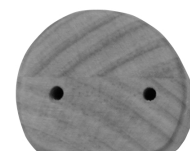

Top Front and Back Dowel (end view)

**Step 7:** Repeat Step 6 for the rear dowel to the top of the back frame. Tighten all bolts at this time.

**Step 8:** To attach the Mattress Support to the crib you must decide which level you wish to have the support attached. To attach the mattress support you must swing the support arms out and slide them into the cut out areas between the end frames and the posts. Next insert 60mm bolts into the holes of the end assembly, through the support arms and into the inserts in the posts. Make sure that the bolts go through the holes in the support arms. Tighten all bolts.

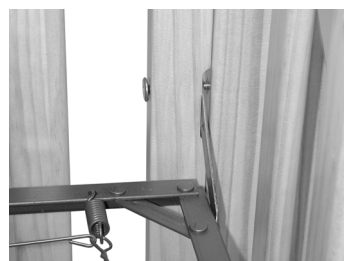

Step 8

Once a crib has been converted to a toddler/youth bed or adult bed it is not intended to be converted back to a crib. In that instance it will not be covered by the manufacturer's warranty.

# YOUTH BED CONVERSION INSTRUCTIONS

Make sure that the Mattress Support (Spring) is in the lowest position for this conversion.

## STARTING FROM CRIB:

Make sure that the mattress support is in the lowest position for this conversion.

**Step 1:** Remove the front frame and two dowels from the front post using the allen wrench.

**Step 2:** Next you must install the dowel (with two tension pins in each end) into the holes located in the front posts at mattress support level. The flat side of the dowel must be against the mattress support side.

**Step 3:** You must now remove the tension pins and fully threaded studs from the remaining dowel. This dowel must be bolted up below the other dowel, in line with the holes that were previously used to bolt up the front frame. Use two 60mm bolts and your allen wrench for this step. Tighten all bolts.



Step 2

## STARTING FROM SCRATCH:

**Step 1:** Follow Steps 1 and 2 of the crib assembly instructions.

**Step 2:** Follow Step 3 of the crib assembly instructions (do not attach front frame).

**Step 3:** Follow Steps 2 and 3 of the Youth Bed Conversion (from crib) assembly instructions.

# ADULT BED CONVERSION INSTRUCTIONS

Using Wood or Metal Rails by Baby's Dream (sold separately)

**Step 1:** Remove mattress support.

**Step 2:** Remove side frames.

**Step 3:** You now have a headboard with posts attached and a footboard with posts attached. You must now attach either metal or wood rails to the headboard and footboard.

## For Wood Rails...

To attach the wood adult rails you will need 8 Cam Studs and 8 Cam Locks. Screw the cam studs into the bottom inserts in each post. Slide the rails up on the cam studs by inserting the cam studs into the holes located in the ends of the wood adult rails. When all of the rails are slid against the posts, you now need to insert the cam locks into the holes on the inside of the rails. Tighten using your allen wrench. Make sure that the cleats on the adult rails are at the top side.



## For Metal Rails...

To attach metal bed rails to the headboard and footboard, use the 1" long spring bolts and washers included in the metal bed rail hardware bag. Place the rail against the bottom inserts. Insert a bolt through the washer and into the insert. Tighten using your hex wrench. Repeat this step in the other seven places.

The Adult Bed **IS NOT** intended to be used by children under 6 years of age, without proper adult supervision. This Adult Bed is **NOT** a toy. **DO NOT** allow children to play or climb on Adult Bed. There is a chance for a child's head to be entrapped between the top Dowel and the Frame of the Footboard.