

FOR FUTURE USE AND REFERENCE
RETAIN THIS INSTRUCTION SHEET AND THE CRIB TOOLS IN THE ORIGINAL SACK
AND SECURE IT TO THE SPRING UNDER THE MATTRESS WITH PLASTIC TIES.

CARE INSTRUCTIONS: The natural warmth of wood is a lasting value. Character marks, checking and grain variations are part of the beauty of wood and, therefore, should not be a concern. If treated with care, this solid wood product will last you for many years to come. Once every week, wipe your Baby's Dream furniture with Pledge®, lemon oil or other similar wood treatment products. If you encounter any roughness in the finish of your new crib, fold a piece of regular white paper—not tissue or newspaper—and rub it gently against the surface until the desired smoothness is achieved. If refinishing, use a non-toxic finish specified for children's products. Let dry, sand with a very fine product such as folded paper or dish washing sponge and, finally, apply water-based baby-safe lacquer for the perfect matching shine.

WARNING! To insure your child's safety and for your own peace of mind, be sure to follow instructions properly. Failure to follow these warnings and assembly instructions could result in serious injury or death. Before each usage or assembly, inspect the crib for damaged hardware, loose joints, missing parts or sharp edges.


- ✓ **DO NOT** use the crib if any parts are missing or broken.
- ✓ **DO NOT** substitute parts. Ask your dealer or write to Baby's Dream Furniture for replacement parts and instructional literature if needed.
- ✓ Make sure that all bolts and screws are properly tightened. **DO NOT** over- or under-tighten.
- ✓ **AVOID STRANGULATION:** As soon as an infant can sit or stand up, close the crib gate or raise the Drop Front permanently.
- ✓ **DO NOT** place the crib near a window where cords from blinds or drapes may strangle a child.
- ✓ **DO NOT** tie pacifiers, necklaces or any other items around a child's neck or on the crib parts.

WARNING! Strings can cause strangulation! Do not place items with string around a child's neck, such as hood strings or pacifier cords. Do not suspend strings over a crib or attach string toys.

- ✓ **NEVER** use plastic shopping bags or other film as mattress covers, because they can cause suffocation.
- ✓ For a newborn, adjust the spring on the highest level of the Height Adjuster and open the gate or lower the Drop Front for easy access.
- ✓ **DO NOT** leave a child in a crib with an open gate or lowered Drop Front. Be sure the gate is closed or the Drop Front is raised and locked in position whenever the child is in the crib. After closing the gate or raising the Drop Front, make sure the latches are secure.
- ✓ The child must be seated at the rear of the crib when lowering or raising the gate or Drop Front.
- ✓ As your child grows, adjust the height of the spring down so that he/she cannot pull himself/herself out of the crib. When the child is able to pull to a standing position, set the mattress to the lowest position and remove bumper pads, large toys and other objects that could serve as steps for climbing out. When the child is able to climb out or reaches the height of 35" (90cm), the bed should no longer be used in the form of a crib. You can continue to use this crib as a youth or toddler bed for another 2 to 3 years by using the **Youth Bed Conversion Kit**.

ANY MATTRESS USED IN THIS CRIB MUST BE AT LEAST 27 1/4" X 51 5/8" WITH A THICKNESS NOT EXCEEDING 6". DO NOT USE A WATER MATTRESS WITH THIS CRIB.


This crib conforms to the applicable regulations promulgated by the Consumer Product Safety Commission.

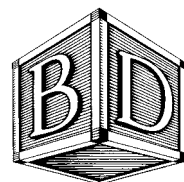

This product may be covered by one or more of the following patents: D366,778; D366,970,5,077,846 and other patents pending.

BABY'S DREAM
FURNITURE, INC.

Buena Vista, GA 31803-0579
 www.babysdream.com

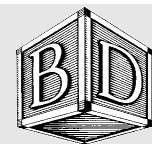

"Georgian™" Drop Gate Crib Instruction Sheet
 Read All Instructions Before Assembling Crib. Keep Instructions For Future Use.

A PHILLIPS HEAD SCREWDRIVER IS REQUIRED

PARTS LIST

- (1) Back Frame
- (2) End Frames
- (1) Front Frame (with Gate attached)
- (1) Gate (attached to Front Frame)
- (2) Front Posts
- (2) Back Posts
- (4) Bun Feet
- (1) Youth Rail
- (1) Guard Rail

HARDWARE

- (8) 90mm Bolts
- (10) 60mm Bolts
- (6) Tension Pins
- (4) Spring Bolts
- (1) Spring (Mattress Support)
- (1) Hex Wrench
- (1) Allen Wrench
- (8) Cross Dowels (packaged with Adult Rails)



Back Frame



Front Frame with Gate attached



90mm Bolt



60mm Bolt



Tension Pin



Bun Feet



Small Spring Bolts



End Frames




Back Posts



Front Posts



Cross Dowel

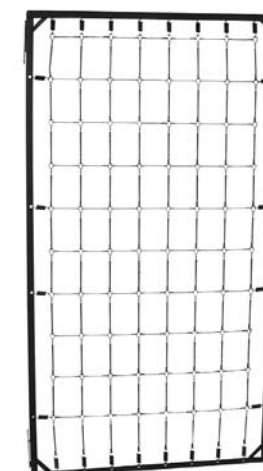

Mattress Support



Guard Rail



Youth Rail



Hex Wrench



Adult Bed Rail



Allen Wrench

CRIB ASSEMBLY INSTRUCTIONS



Step 1 & 2

Step 1: To begin assembly you will need the following items: Back Frame, (4) 60mm Bolts, Allen Wrench, and (2) Back Posts.

Step 2: To assemble the Headboard you must line up the posts with the holes in the Back Frame and insert the bolts into the Back Frame inserts. (Tighten using Allen Wrench).



Step 3

Step 3: To attach the End Frames to the Back Frame you will need the (2) End Frames and (4) 90mm Bolts. Attach the End Frames to the Back Posts using the 90mm Bolts and the Allen Wrench.



Step 4

Step 4: To assemble the Front Posts to the End Frames you will need (4) 90mm Bolts, (2) Front Posts, and the Allen Wrench. Line up the holes in the posts with the inserts in the End Frames and insert. Tighten the bolts.



Step 5

Step 5: To attach the Front Frame with Gate to the Front Posts you will need to use the (4) 60mm Bolts and the Allen Wrench. **Open and close Gate to check for proper alignment of triggers and strike plates.**

Step 6



Step 6: To mount the Spring (Mattress Support) to the crib you will need (4) Spring Bolts, the Spring, and the Hex Wrench. Mount the Spring in the desired location. Insert the Spring Bolts through the hole in the spring arm and into the inserts in the posts. Tighten using the Hex Wrench.

YOUTH BED (From Crib)

Step 1: Remove the Front Frame from the crib.

Step 2: Remove the hardware (Strike Plates) from the crib Front Posts.

Step 3: Insert the small Tension Pins into the holes in the ends of the Youth Rail. Tap the pins in **halfway only!**

Step 4: Insert the small Tension Pins into the holes in the ends of the Guard Rail. Tap the pins in **halfway only.**

Step 5: Next you must attach the Guard Rail and the Youth Rail to the Front Posts. You may need someone to assist you with this step. You must line up the Youth Rail and Guard Rail Pins with the small holes in the post. Slide the pins into the holes in the posts (on both sides) and bolt together using (2) 90mm Bolts and your Allen Wrench.

Step 6: Lower the Mattress Support to the lowest position.



YOUTH BED (From Scratch)

Step 1: Follow steps 1 through 4 of the Crib Assembly instructions.

Step 2: Follow steps 2 through 6 of the Youth Bed (From Crib) instructions.

ADULT BED (From Crib)

***NOTE FOR ASSEMBLY:** This conversion is slightly different than all of our other Adult Bed conversions. The main difference is that the headboard will be used as the footboard for the Adult Bed conversion.

Step 1: As stated above, the headboard with posts attached will be used as the footboard for the Adult Bed.

Step 2: To assemble the headboard you will need the Front Frame from the crib/with the gate and hinge removed. The other items required for the assembly are the Youth Rail, Guard Rail, Front Posts, Tension Pins, and (6) 60mm Bolts.

Step 3: To assemble the headboard you will need to do the following steps:

- Insert the Tension Pins into the holes in the ends of the Youth Rail and Guard Rail. Tap Tension Pins (half way only) into the small holes using a hammer.
- Loosely assemble the Front Frame to the posts, as shown in the photo. Now you must insert the Tension Pins of the Youth and Guard Rails into the holes in the posts (see photo). Tighten the bolts using your Allen Wrench.



Step 4: To attach the Adult Rails to the front and back assemblies you will need the following items from the Adult Rail Kit: (2) Adult Rails, (8) Cross Dowels, and the Support Bracket/Screw Kit. (Step 1) Insert the Cross Dowels into the holes in the inside face of the Adult Rails, with the slotted side of the Cross Dowel facing outward. You will need this slot to adjust the Cross Dowel. (Use a screwdriver to line it up with the bolt). Make sure that the cleats on the bed rails are towards the top side during assembly. Insert the 90mm bolts through the post, through the end of the bed rail, and into the Cross Dowel. Tighten using the Allen Wrench. Attach the brackets as shown on the bracket instruction sheet.