



# Convertible "Omni™" Crib Instruction Sheet

Read All Instructions Before Assembling Crib. Keep Instructions For Future Use.

(A PHILLIPS HEAD SCREWDRIVER AND A FLAT-HEAD SCREWDRIVER IS REQUIRED)

### PARTS LIST

- (1) Front Frame
- (1) Back Frame
- (2) End Frames
- (2) Back Posts
- (2) Front Posts
- (2) Youth Post Caps
- (1) Guard Rail (sold separately)

### HARDWARE

- (8) 80mm Bolts
- (12) 60mm Bolts
- (1) Allen Wrench
- (1) Spring (Mattress Support)

### PARTS LIST WITH ADULT RAILS


- (2) Adult Rails
- (8) Cam Locks
- (8) Cam Studs
- (1) Support Bracket Kit

### PARTS LIST WITH GUARD RAIL

- (1) Guard Rail
- (4) Tension Pins




Back Frame

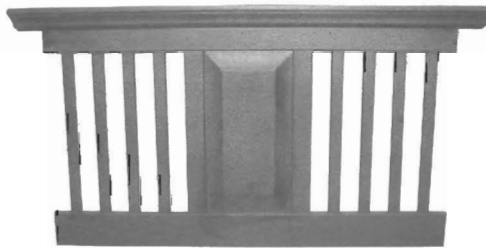

Front Frame



Tension Pin

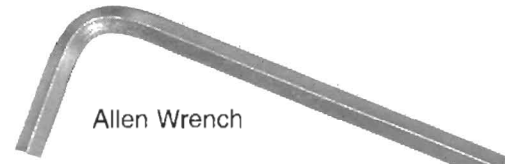

Allen Wrench



Back Post



Front Post



End Frame



80mm Bolt




60mm Bolt



Youth Post Cap



Cam Lock

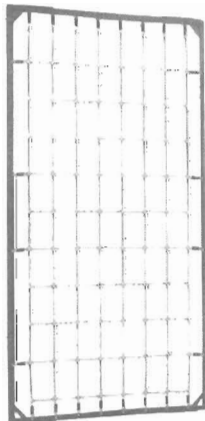

Spring (Mattress Support)



Youth Guard Rail




Cam Stud



Adult Rail


# CRIB ASSEMBLY INSTRUCTIONS

**Step 1:** To assemble the Back Frame to the Back Post you will need four 80mm Bolts and the Allen Wrench. Make sure that the bolts are not completely tightened until the Cap Rail of the Back Frame is against the top of the Back Post. Tighten bolts at this time using your Allen Wrench. \*Note in the photo how the posts are positioned.

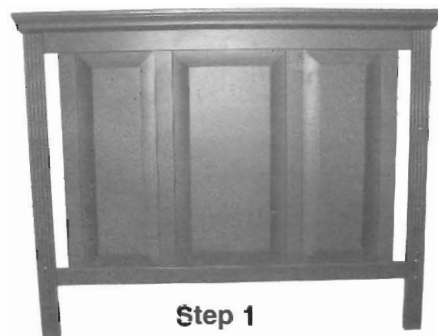


Step 1

**Step 2:** To assemble the Front Frame to the Front Post you will need four 80mm Bolts and the Allen Wrench. Make sure that the bolts are not completely tightened until the Cap Rail of the Front Frame is against the top of the Front Posts. Tighten the bolts at this time using the Allen Wrench. \*Note in the photo how the posts are positioned.

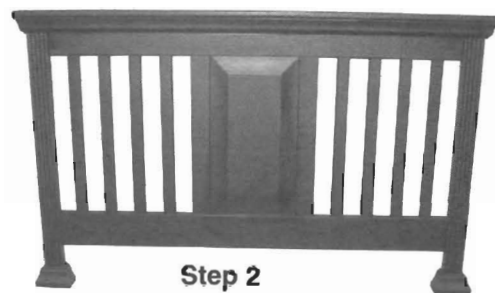

Step 2

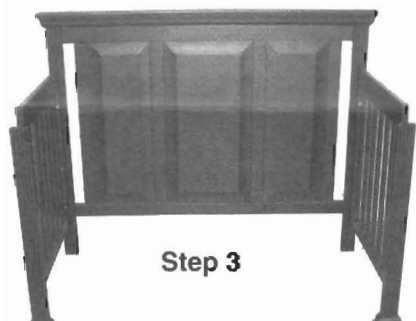

Step 3

**Step 3:** The third step in assembly is to attach the two End Frames to the front and the back assemblies. For this step you will need eight 60mm and the Allen Wrench. The notched area of the upper end rail of the End Frame must be attached to the front of the crib. (See photo) Bolt the End Frames to the front and the back assemblies using eight 60mm Bolts and the Allen Wrench. Tighten all the bolts at this time.

**Step 4:** To attach the Mattress Support to the crib you must decide which level you wish to have the support attached. To attach the Mattress Support you must swing the support arms out and slide them into the cut out areas between the end frames and the post. Next insert the 60mm Bolts into the holes of the end assembly, through the support arms and into the inserts in the posts. (Make sure that the bolts go through the holes in the support arms.) Tighten all the bolts. \*Note in photo how arms are positioned and the arms of the spring support are pointing up.



Step 4



Once a crib has been converted to a youth bed or adult bed it is not intended to be converted back to a crib.

## YOUTH BED CONVERSION INSTRUCTIONS

### STARTING FROM CRIB:

Make sure that the mattress support is in the lowest position for this conversion.

**Step 1:** Remove the Front Frame from the crib by removing the four bolts that attach it to the Front Posts. You must leave the Front Post attached to the End Frames.

**Step 2:** You must now attach the Youth Rail to the Front Posts. Using a hammer you must tap the two Tension Pins half way into the small holes located in the ends of the Youth Rail. You will now need two 80mm Bolts and your Allen Wrench. Insert the Tension Pins of the Youth Rail into the small holes located in the lower inside area of the Front Posts. Next you must insert two of the 80mm Bolts through the holes in the post and into the inserts of the Youth Rail. Tighten using your Allen Wrench.

**Step 3:** You must make sure that your Mattress Support (Spring) is in the lowest position.

**Step 4:** The last step is to attach the two Youth Post Caps to the top of the Front Post using two 80mm Bolts and one Tension Pin in each. Insert the Tension Pin in the smaller holes and line up the placement of the bolts and tighten with your Allen Wrench.



Step 1

Step 4



## ADULT BED CONVERSION FROM CRIB USING WOOD OR METAL RAILS

**Step 1:** Remove mattress support.

**Step 2:** Remove side frames.

**Step 3:** You now have a headboard with posts attached and a footboard with posts attached. You must now attach either metal or wood rails to the headboard and footboard. For wood rails you must use Baby's Dream Furniture Adult Rail Conversion Kit including eight cam locks, eight cam studs and one allen wrench, all included in the adult rail hardware bag.

**Step 4:** Screw the cam studs into the bottom inserts in each post. Slide the rails up on the cam studs by inserting the cam studs into the holes located in the ends of the wood adult rails. When all of the rails are slid against the posts, you now need to insert the cam locks into the holes on the inside of the rails. Tighten using your allen wrench. Make sure that the cleats on the adult rails are at the top side.

To attach metal bed rails purchased from Baby's Dream Furniture, Inc. To the headboard and footboard you must do the following: the hardware bag sent with the metal bed rails includes eight 1" long spring bolts. These bolts and eight washers will be used to attach the metal rails. Place the rail against the bottom inserts. Insert a bolt through the washer and into the insert. Tighten using your hex wrench. Repeat this step in the other seven places.



# FOR FUTURE USE AND REFERENCE

RETAIN THIS INSTRUCTION SHEET AND THE CRIB TOOLS IN THE ORIGINAL SACK AND SECURE IT TO THE SPRING UNDER THE MATTRESS WITH PLASTIC TIES.

**CARE INSTRUCTIONS:** The natural warmth of wood is a lasting value. Character marks, checking and grain variations are part of the beauty of wood and, therefore, should not be a concern. If treated with care, this solid wood product will last you for many years to come. Once every week, wipe your Baby's Dream furniture with Pledge®, lemon oil or other similar wood treatment products. If you encounter any roughness in the finish of your new crib, fold a piece of regular white paper—not tissue or newspaper—and rub it gently against the surface until the desired smoothness is achieved. If refinishing, use a non-toxic finish specified for children's products. Let dry, sand with a very fine product such as folded paper or dish washing sponge and, finally, apply water-based baby-safe lacquer for the perfect matching shine.

## **WARNING!**

To insure your child's safety and for your own peace of mind, be sure to follow instructions properly. Failure to follow these warnings and assembly instructions could result in serious injury or death. Before each usage or assembly, inspect the crib for damaged hardware, loose joints, missing parts or sharp edges.

- ✓ **DO NOT** use the crib if any parts are missing or broken.
- ✓ **DO NOT** substitute parts. Ask your dealer or write to Baby's Dream Furniture for replacement parts and instructional literature if needed.
- ✓ Make sure that all bolts and screws are properly tightened. **DO NOT** over- or under-tighten.
- ✓ **AVOID STRANGULATION:** As soon as an infant can sit or stand up, close the crib gate or raise the Drop Front permanently.
- ✓ **DO NOT** place the crib near a window where cords from blinds or drapes may strangle a child.
- ✓ **DO NOT** tie pacifiers, necklaces or any other items around a child's neck or on the crib parts.


## **WARNING!**

Strings can cause strangulation! Do not place items with string around a child's neck, such as hood strings or pacifier cords. Do not suspend strings over a crib or attach string toys.

- ✓ **NEVER** use plastic shopping bags or other film as mattress covers, because they can cause suffocation.
- ✓ For a newborn, adjust the spring on the highest level of the Height Adjuster and open the gate or lower the Drop Front for easy access.
- ✓ **DO NOT** leave a child in a crib with an open gate or lowered Drop Front. Be sure the gate is closed or the Drop Front is raised and locked in position whenever the child is in the crib. After closing the gate or raising the Drop Front, make sure the latches are secure.
- ✓ The child must be seated at the rear of the crib when lowering or raising the gate or Drop Front.
- ✓ As your child grows, adjust the height of the spring down so that he/she cannot pull himself/herself out of the crib. When the child is able to pull to a standing position, set the mattress to the lowest position and remove bumper pads, large toys and other objects that could serve as steps for climbing out. When the child is able to climb out or reaches the height of 35" (90cm), the bed should no longer be used in the form of a crib. You can continue to use this crib as a youth or toddler bed for another 2 to 3 years by using the Youth Bed Conversion Kit.

**ANY MATTRESS USED IN THIS CRIB MUST BE AT LEAST 27<sup>1</sup>/<sub>4</sub>" X 51<sup>5</sup>/<sub>8</sub>" WITH A THICKNESS NOT EXCEEDING 6". DO NOT USE A WATER MATTRESS WITH THIS CRIB.**

This crib conforms to the applicable regulations promulgated by the Consumer Product Safety Commission.

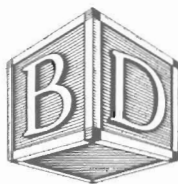

This product may be covered by one or more of the following patents: D366,778; D366,970,5,077,846 and other patents pending.



# BABY'S DREAM FURNITURE, INC.

Buena Vista, GA 31803-0579

[www.babysdream.com](http://www.babysdream.com)

